

Jet-Opaque


A One Step Ink Jet Transfer Paper for Dark Colored Fabrics
Heat Press Recommended



PRINTING INSTRUCTIONS

- ◆ **Print on the coated side of the paper.**
- ◆ **Print your image right side up**
- ◆ **Select “Plain Paper” as your paper setting**
- ◆ **Select the following resolutions for your printer**
 - **EPSON: 360 , 720, or “fine”**
 - **HP: Best**
 - **CANON: Standard**

Note: As printers and Inks vary, these settings are merely recommendations. It is important that a minimal amount of ink be used to assure that it penetrates the coating and comes out of your printer “DRY”. Excessive ink will result in running and bleeding of colors especially in the wash.

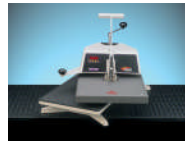

TRANSFERRING YOUR PRINT

- ◆ **Jet Opaque can be used on Cotton, 50/50 and some other fabrics which are not overly stretchy and can withstand the recommended heat transfer temperatures.**
- ◆ **Always pre-press your fabric for 3-5 seconds to remove wrinkles and excess moisture.**
- ◆ **Trim your transfer to avoid transferring excess white film coating around the image.**
- ◆ **Peel off the Paper Backing behind your image.(making a slight tear in a corner will make this step easier).**
- ◆ **Place the transfer “image side up” on the substrate.**
- ◆ **Cover the transfer with the supplied “silicon” sheet or use a Teflon sheet. The silicon sheets supplied can be used multiple times on each side.**
- ◆ **Press for 20 seconds at 350 degrees using Medium pressure.**
- ◆ **After opening the press,allow the garment to cool completely before peeling the silicon sheet off in a smooth motion.**

WASHING

*Turn the garment inside out, wash in **Cold** water using a **NON-BLEACH** detergent. Add **NO BLEACH**. Remove Immediately and **DRY**.*